






# Room Thermostat Underfloor

in combination with Bosch Smart Home Controller II\*

Function	 Device	 Bosch Smart Home System	 Matter System
Set temperature	● <sup>2</sup>	● <sup>2</sup>	● <sup>1</sup>
Displayed temperature (current/target)	● <sup>2</sup>	● <sup>2</sup>	● <sup>1</sup>
Humidity	● <sup>2</sup>	● <sup>2</sup>	● <sup>1</sup>
Cooling		● <sup>2/3</sup>	
Operation mode (manual/schedule)		● <sup>2</sup>	
Schedule		● <sup>2</sup>	
Boost		● <sup>2</sup>	
Temperature adjustment		●	
Child lock		●	
Valve Type (normally open/normally closed)		●	
Heater type (underfloor heating, underfloor heating low energy, radiator, passive convector (without fan), active convector (with fan))		●	
Faults (battery defect, trouble, tampered)		●	
Automations/Scenarios		●	● <sup>1</sup>
Services (climate manager "sustainable ventilation", "heating break & cooling")		●	

<sup>1</sup> Possible use depending on the selected Matter Smart Home system.

<sup>2</sup> This function can only be used via the room temperature control. The room temperature control combines thermostats in one room to uniformly regulate the temperature in the room.

<sup>3</sup> Only in combination with a heat pump.